

IMPORTANT SAFETY RECALL

Frigidaire Recalls Certain Frigidaire® and Kenmore Elite® Smoothtop Freestanding Electric Ranges with Rotary Knobs and Digital Displays

The Frigidaire division of Electrolux Canada Corp. ("Frigidaire") is voluntarily recalling certain smoothtop freestanding Frigidaire® and Kenmore Elite® electric ranges with rotary knobs and digital displays as described in the chart below.

Hazard: Depending on the model, the surface heating elements can: 1) turn on spontaneously without being switched on; 2) fail to turn off after being switched off; or 3) heat to different temperatures than those selected by unit controls. These characteristics create fire and burn risks for consumers. Frigidaire is not aware of any reports of serious injuries or substantial property damage in Canada related to these issues. In the United States, Frigidaire has received four reports of minor injuries and two reports of minor property damage.

Description and Affected Models: Only affected models sold in Canada from approximately June 2001 to September 2008 bearing the following model and serial numbers are being recalled in Canada (the "Affected Units"). The model number can be found by opening the range drawer at the base of the unit.

FRIGIDAIRE		KENMORE ELITE	
Model numbers beginning with these LETTERS and NUMBERS	SERIAL NUMBER RANGE	Model numbers beginning with these LETTERS and NUMBERS	SERIAL NUMBER RANGE
CGLEFM97DB CGLEFM97DS CPLEF398AC CPLEF398DC CPLEFM99EC CPLEFZ98GC PGLEF388CS PGLEF388ES	VF122xxxx to VF831xxxx or NF122xxxx to NF806xxxx	C970-68802 C970-68803 C970-68804 C970-68808 C970-68809 C970-68830 C970-68832 C970-68833 C970-69803 C970-69804 C970-69808 C970-69809	VF122xxxx to VF831xxxx or NF122xxxx to NF806xxxx



Smoothtop ranges with rotary knobs and digital displays.



Rotary knob surface element controls with digital displays.



Serial plate is located by opening the range drawer at the bottom of the unit.

Remedy: Consumers should immediately unplug and stop using the Affected Units and contact Frigidaire to schedule a free repair.

Consumer Contact: Consumers should contact Frigidaire between the hours of 7:00 a.m. and 8:00 p.m. Eastern Time, Monday to Saturday at 1-877-609-7857, or visit the firm's Web site at www.smoothtoprangerecall.ca.