

KitchenAid®

SAFETY RECALL NOTICE

30", and 36" electric radiant cooktops with glass surface & touch controls.

Some cooktop surface elements may turn on by themselves, posing a potential fire and burn hazard.

WHAT TO DO?

Call: 1-888-900-7897

Visit: repair.whirlpoolcorp.com

In the meantime, we recommend that the unit be turned off at the circuit breaker when not in use. DO NOT leave flammable materials or empty cookware on or near the cooktop.

MODEL NUMBERS BEGIN WITH:

KCES950HSS

KCES950HBL

KCES956HSS

KCES956HBL



In cooperation with the Health Canada

Post until November 30, 2019



SAFETY RECALL NOTICE

30", and 36" electric radiant cooktops with glass surface & touch controls.

Some cooktop surface elements may turn on by themselves, posing a potential fire and burn hazard.

WHAT TO DO?	
Call: 1-888-900-7897	
Visit: repair.whirlpoolcorp.com	
In the meantime, we recommend that the unit be turned off at the circuit breaker when not in use. DO NOT leave flammable materials or empty cookware on or near the cooktop.	

MODEL NUMBERS BEGIN WITH:	
WCE97US0HS	WCE97US0HB
WCE97US6HS	WCE97US6HB



In cooperation with the Health Canada

Post until November 30, 2019



SAFETY RECALL NOTICE

24", 30", and 36" electric radiant cooktops with glass surface & touch controls.

Some cooktop surface elements may turn on by themselves, posing a potential fire and burn hazard.

WHAT TO DO?

Call: 1-888-900-7897

Visit: repair.whirlpoolcorp.com

In the meantime, we recommend that the unit be turned off at the circuit breaker when not in use. **DO NOT** leave flammable materials or empty cookware on or near the cooktop.

MODEL NUMBERS BEGIN WITH:

JEC4430HS	JEC4430HB
JEC4536HS	JEC4536HB
JEC4424HB	



Post until November 30, 2019

In cooperation with the Health Canada



SAFETY RECALL NOTICE

30", and 36" electric radiant downdraft cooktops with glass surface & touch controls.

Some cooktop surface elements may turn on by themselves, posing a potential fire and burn hazard.

WHAT TO DO?

Call: 1-888-900-7897

Visit: repair.whirlpoolcorp.com

In the meantime, we recommend that the unit be turned off at the circuit breaker when not in use. DO NOT leave flammable materials or empty cookware on or near the cooktop.

MODEL NUMBERS BEGIN WITH:

JED4430GB

JED4536GB

JED4430GS

JED4536GS



Post until November 30, 2019

In cooperation with the Health Canada